
Instructions:

Cut out these two disks from the plywood thickness indicated at the top of each page. Using a coping saw or bansaw cut out the black areas of each disk. Once both are cut out glue them together and sand out imperfections. Don't freak out about the circle part if it is a little off it will still work. The line that the bobbin rests against is the most critical cut as well as having the bobbin centered.

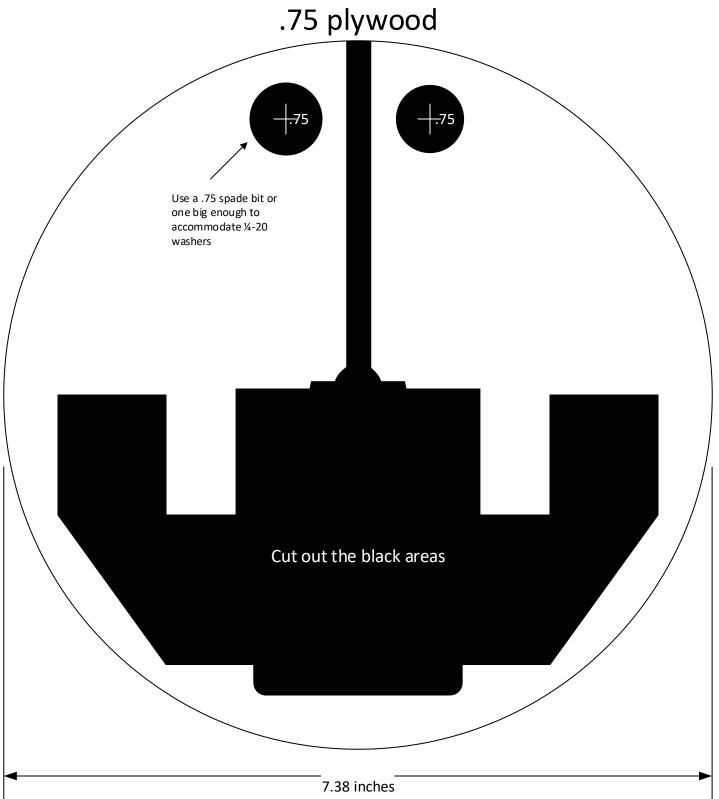

.25 plywood or Luan plywood

